

The post heating of vehicle wraps is fundamental to the success and longevity of vehicle wraps. Incorrect post heating will in most cases, result in lifting / popping of the film in places where the film is under pressure from conforming to the shape of the vehicle. Please refer to application guidelines for correct post heat temperature.


• No post heating



• Insufficient post heating upto 85°C



• Correct post heating

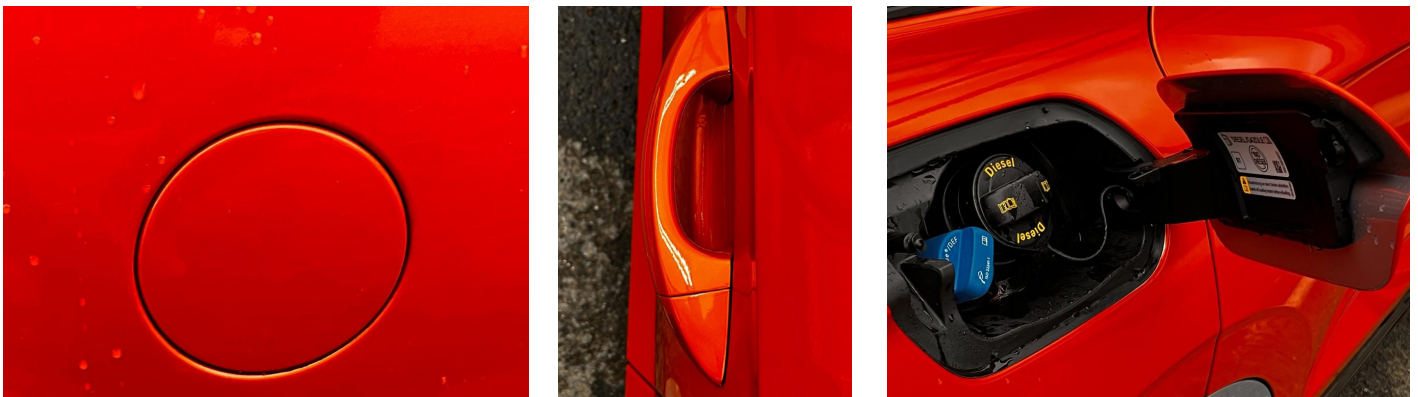

For further technical support email technical@metamark.co.uk or call +44 (0)1483 571111

Metamark (UK) Limited

Luneside • New Quay Road • Lancaster • LA1 5QP • Tel +44 (0)1524 387140 • Fax +44 (0)1524 387147
Metamark House • Genesis Business Park • Albert Drive • Woking • GU21 5RW • Tel +44 (0)1483 571111

sales@metamark.co.uk
www.metamark.co.uk